 



Quick User Guide

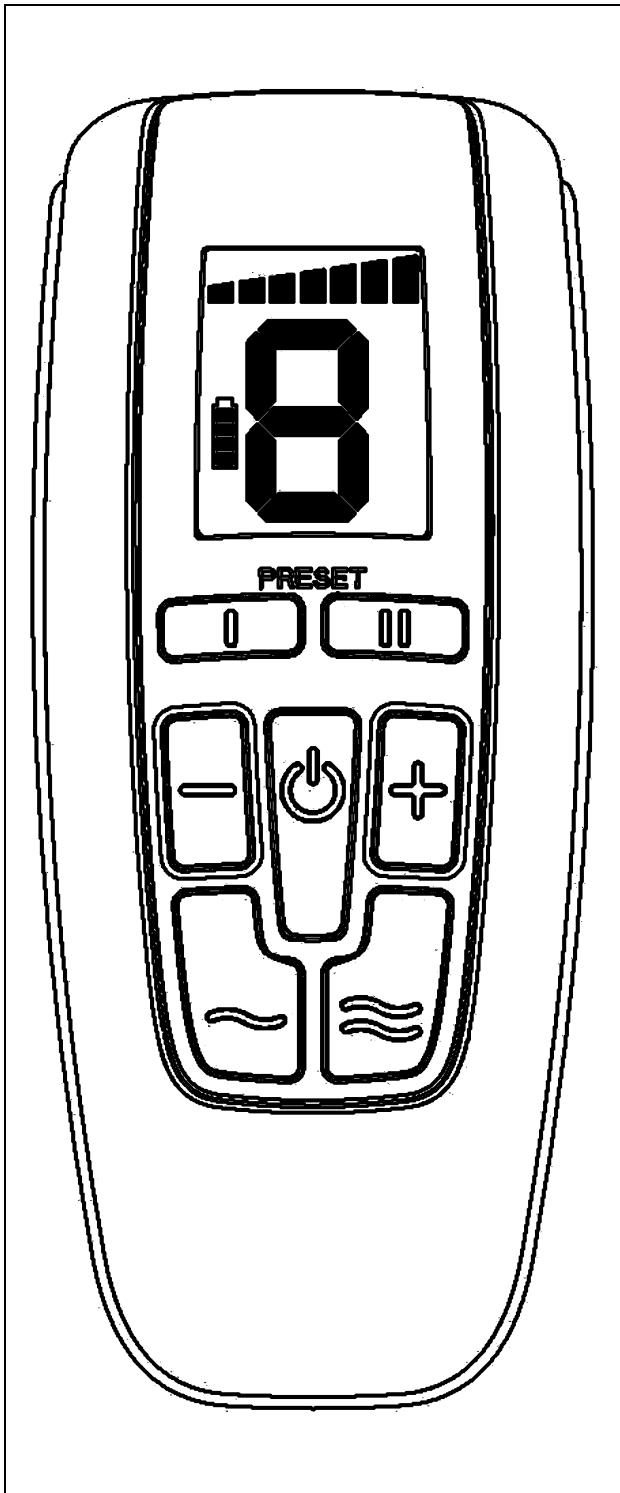

- Switch the shower ON & OFF
Press the Start / Stop button
Can also switch ON using a PRESET when it has been programmed



 
- Increase the temperature
Press the WARMER button
Maximum approx 46°C



- Reduce the temperature
Press the COOLER button
Minimum approx 25°C

Temperature adjustment

L (low), 1 to 9, H (high)
(Approx 25°C to 46°C)

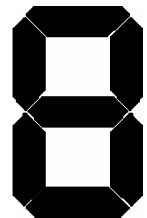

- Increase the flow
Press INCREASE FLOW
Maximum approx 12 l/m




- Reduce the flow
Press REDUCE FLOW
Minimum approx 4 l/m

Flow adjustment

1 segment to 7 segments
(Approx 4 l/m to 12 l/m)



Setting and using PRESETS

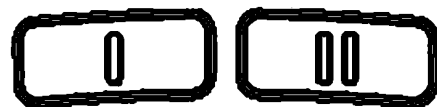

a) Adjust the shower to the required temperature and flow

b) Press one of the PRESETS for more than 3secs to store setting

- Momentarily press one of the PRESETS to use that setting.